


# Automatic Table Top Medical Tray Sealer MBW9X12



**Fast  
Powerful  
Cost Effective**

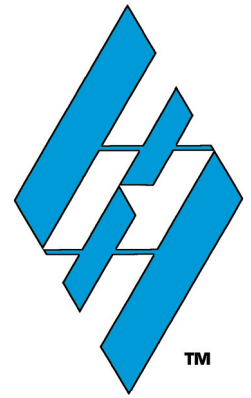

## Standard Features:

Digital Timing System

Digital Thermostat

Stainless Steel Frame

Stainless Steel Shell

Balanced Alum. Heating Platen

Stainless Steel Sealing Face

Fully Enclosed Sealing Chamber

Adjustable Pressure Regulator

Digital Air Pressure Gauge

Self Aligning Pressure System

2400 Lbs. Sealing Force

Quick Change Tooling

Energy Efficient

Fast Cycle Times

No Lubrication Required



# MED PACK®

© 2024 HANNAN PRODUCTS CORP.  
MED PACK is a Registered Trademark of HANNAN Products Corp.

The MED PACK® MBW9X12 tray sealer has been engineered for reliability, high productivity and efficient use of space and energy. This medical tray sealer is ideally suited to meet your requirements for speed, accuracy and flexibility of operation. Automatic operation, self aligning pressure system, and balanced heat platen assure consistent sealing of materials. MED PACK® equipment is designed for continuous production use with a minimum of operator skill. From it's stainless steel construction to it's digital controls, the MED PACK® MBW9X12 is "The Professional's Choice".

**Examples Of Outstanding Standard Features Include**

1. Fully enclosed sealing chamber (Safe Operation).
2. Instant fixture change over – No tools required (True Drop-In Tooling).
3. Stationary heating platen with stainless steel sealing face.

**Packaging Made Easy / Packaging Made in America**

**SPECIFICATIONS:**


Sealing Area \_\_\_\_\_ 9" X 12"  
 Maximum Card Size \_\_\_\_\_ 10 ½" X 13 ½"  
 Maximum Blister/Tray Depth \_\_\_\_\_ 1 ½"  
 Available Sealing Force \_\_\_\_\_ 2300 Lbs. @ 100 PSI  
 Temperature Control \_\_\_\_\_ 120°F To 570°F  
 Electrical \_\_\_\_\_ 110 VAC/12 A/1 PH/60 HZ  
 Minimum Air Requirement \_\_\_\_\_ 40 PSI  
 Shipping Weight \_\_\_\_\_ 140 LBS.

**OPERATING SEQUENCE:**


- 1 - Load Tray, package contents, Tyvek®, foil or medical lids into the sealing fixture.
- 2 - Slide shuttle completely into sealing chamber.
- 3 - Automatic heat and pressure cycle seals tray to lidding material.
- 4 - Slide fixture shuttle out of the sealing chamber.
- 5 - Remove finished package and reload for next cycle.



**FRONT VIEW**

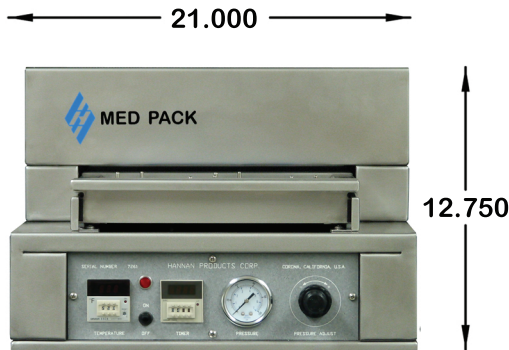

**SIDE VIEW**

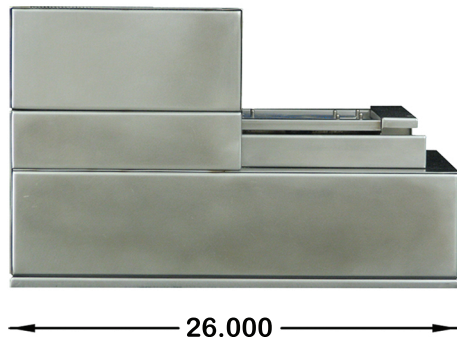

Made in the U.S.A.

HANNAN PRODUCTS CORPORATION  
 9106 PULSAR COURT, UNIT C, CORONA, CA. 92883  
 TELEPHONE: (951) 735-1587 / (800) 954-4266  
 FAX: (951) 735-0827  
 WWW.MEDPACKINFO.COM SALES@MEDPACKINFO.COM